
Onna Configurator:


A basic configuration of the Onna Configurator for a single door station is shown below:

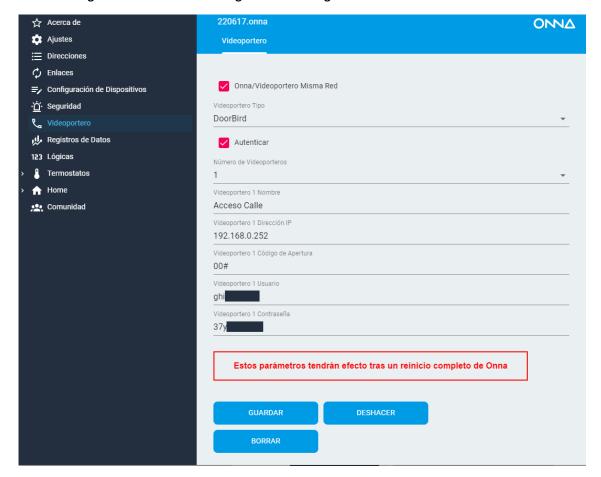

The IP address of the board and the door opening number followed by a # must be specified.

We will specify the configuration for the IP address of the display.



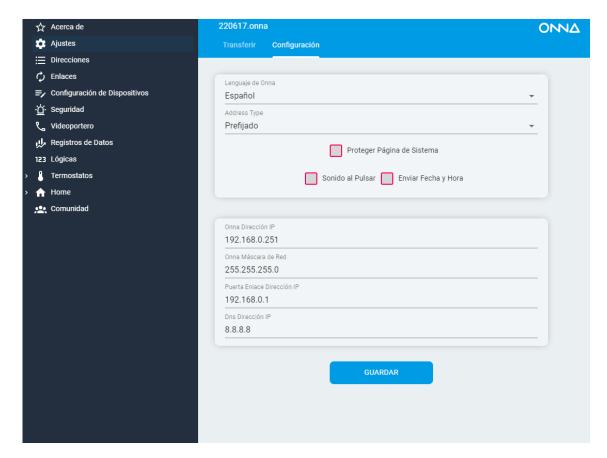

The screen may need to be reset for this setting to take effect.


The Onna/Video door phone same network option refers to the configuration used in housing developments with networks interconnected by security routers. It is not detailed in this manual.



Doorbird Street Plate:

The configuration of the Doorbird entrance panel is done from the Doorbird application itself. This requires the administrator credentials that are included with the panel itself.


First, we adjust the SIP parameters of the panel:

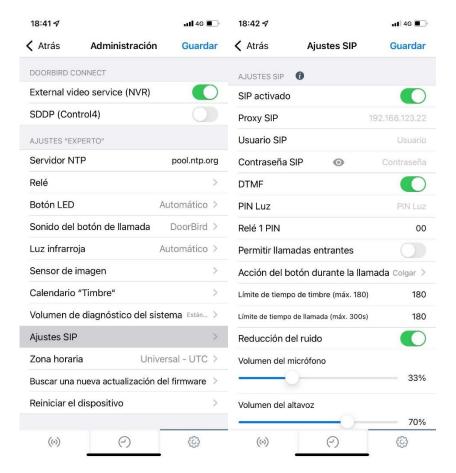

The door opening code is configurable and the same code must be set in the configurator. DTMF must be selected.



Next, enter the SIP number from the screen. To do this, follow the steps below:

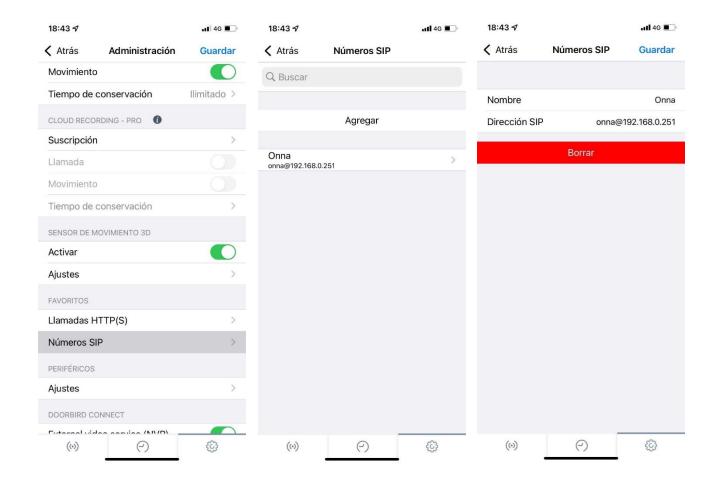



Finally, a bell schedule should be established. This allows you to select what times the call will be forwarded to the Onna screen. By default, 24h and the call destination are selected, which will be the Onna screen:

